

WIRED & WIRELESS PROGRAMMABLE THERMOSTAT


User Guide



FPP15206
FPP16216



1 Screen and button overview

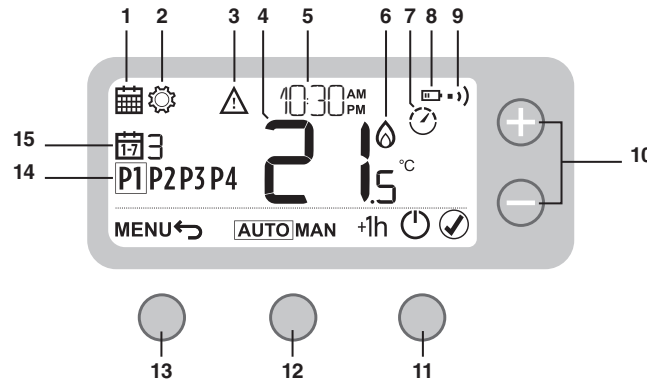


- 1 Programming Menu
- 2 Settings Menu
- 3 Alert
- 4 Room Temperature
- 5 Current time
- 6 Heat demand
- 7 Optimisation
- 8 Low battery
- 9 Wireless signal (FPP16216 only)
- 10 Temperature adjust
- 11 Right button
- 12 Middle button
- 13 Left button
- 14 Schedule period
- 15 Day

2 Programming the Schedule

Default Schedule

	P1	P2	P3	P4
	6:30	8:00	18:00	22:30
	21°C	16°C	21°C	16°C

Adjusting the Schedule

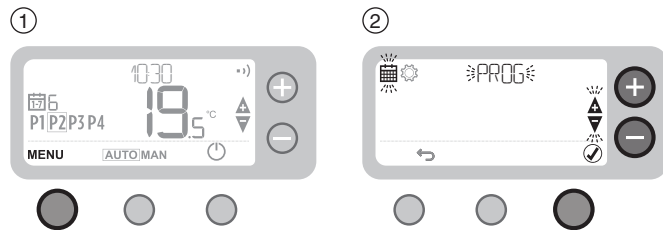


Press MENU

Select PROG then confirm



Select day then confirm


Select period then confirm

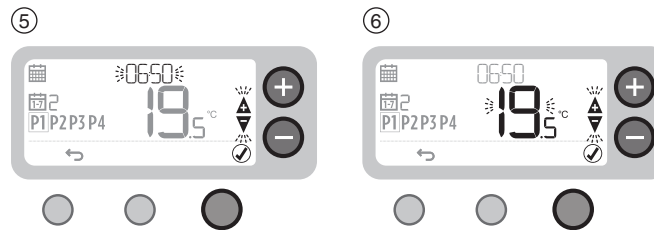

Adjust time then confirm

Adjust temperature then confirm

Copy Day

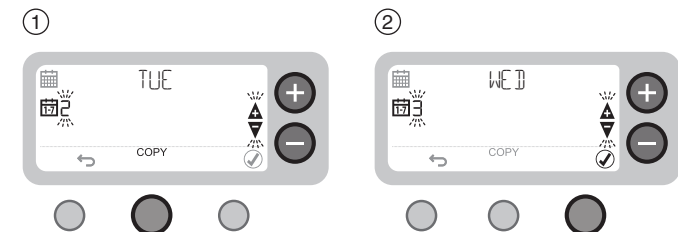


Select day then COPY

Select "TO" day then confirm


3 Device Modes

“AUTO”

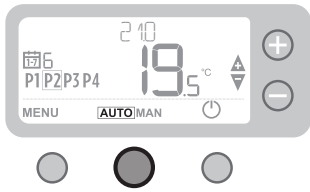


Programmed schedule is followed

“MAN”

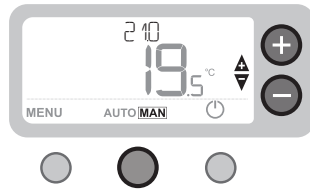

Only set temperature is followed


“OFF”

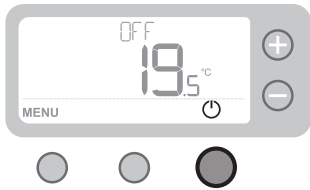

Heating is OFF


4 Temperature Override

“AUTO”

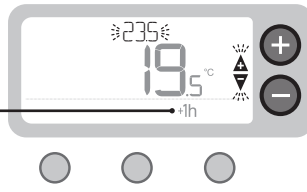


Temporary override until next programmed period

“MAN”

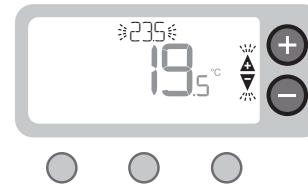

Permanent override until manually changed

“+1h”

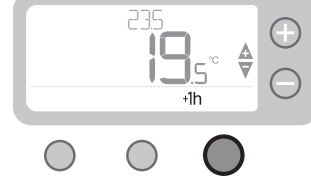


Press for one hour override


6 Troubleshooting



 10% battery power



Battery critical low

 

Faulty sensor

Wireless Programmable Thermostat and Relay Box only (FPP16216)

Thermostat is flashing

and LED is flashing RED

Wireless signal lost - Move the Thermostat to another location to try and restore communication.

Thermostat is flashing

and LED is flashing.


Check Relay Box has power by pressing the button to switch boiler on. If Relay Box has power then no wireless binding data stored - contact your installer.

Relay Box LED is flashing RED slowly.

Relay Box is in binding mode - will time out of this mode after 3 minutes.


5 Date and Time

①

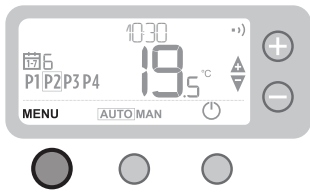


Press MENU

②

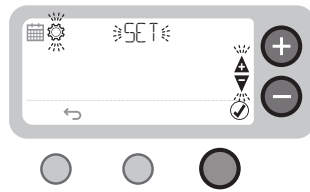


Select SETTINGS then confirm

⑤

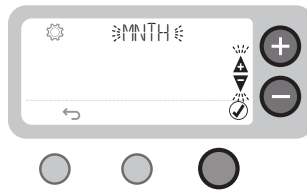


Set MONTH (1-12) then confirm

⑥

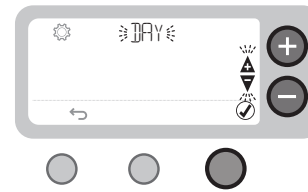


Repeat steps to set DAY, HOUR and MINUTE

③

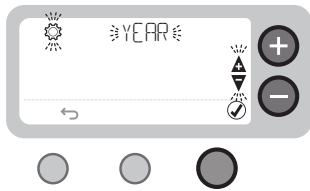

Select YEAR then confirm

④

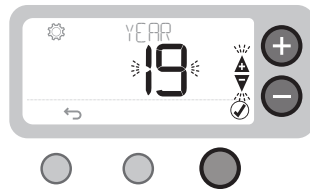

Set YEAR then confirm

Primaflow F&P LTD

unit 1A Votec House, Hambridge Lane, Newbury, RG145TN
t: 01788 527701 w: primaflowandp.co.uk

Registered office: Votec House, Hambridge Lane, Newbury RG14 5TN
Registered No. 02662075 England VAT No. 340 049 632