


BASB0220-12C

1 1/4" Basin Waste, Slotted Tail

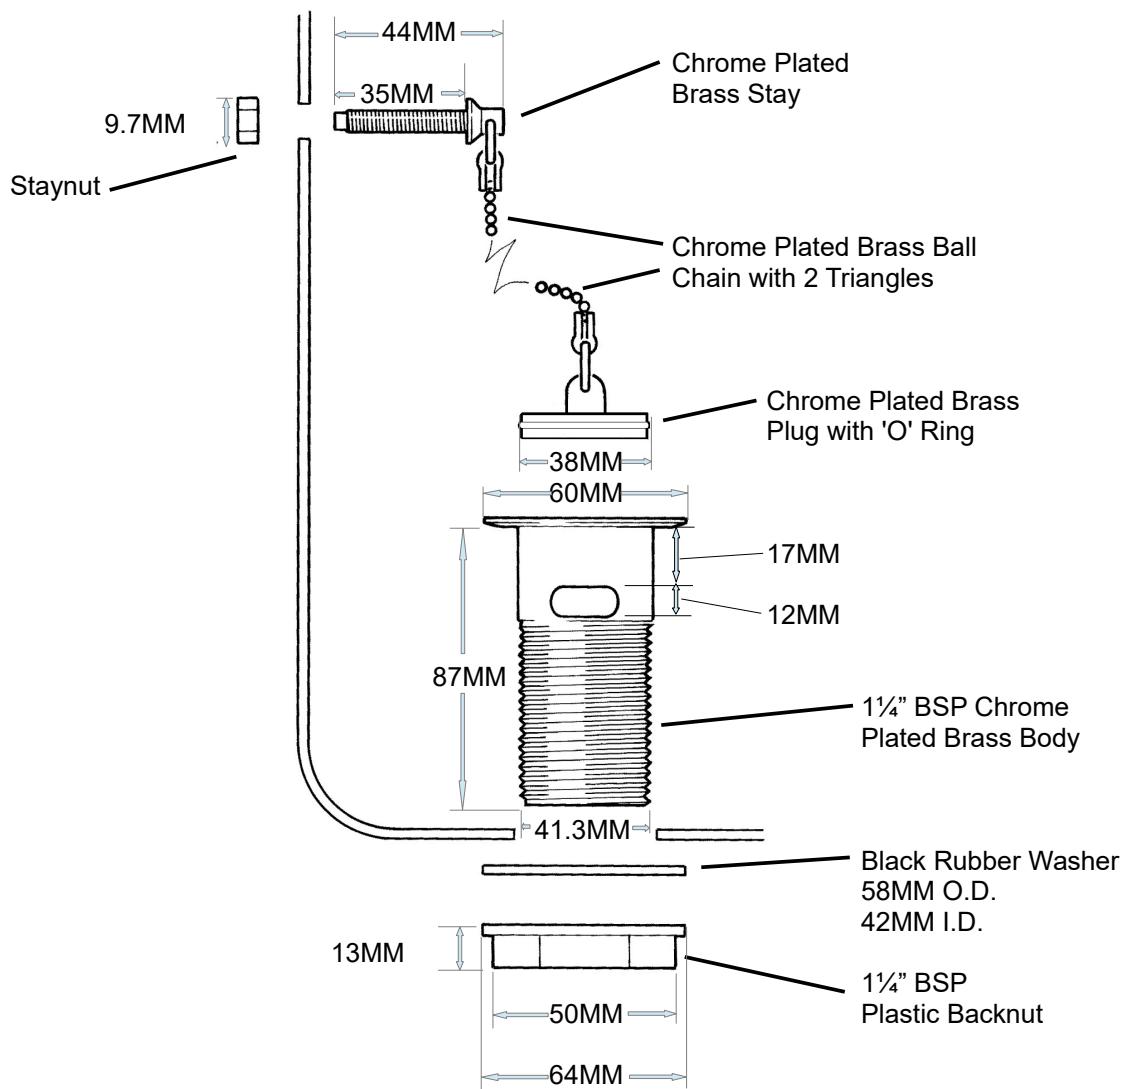

1. Assemble components as shown on the drawing.
2. Apply silicon sealant to the underside of the waste flange.
3. On the underside of the basin, where the threaded tail exits, it will be necessary to seal using plumber's putty or a suitable sealant.
4. Once fitting has been completed, carefully clean all plated surfaces. The finished surfaces on this product are hard and durable and should be cleaned on a regular basis to maintain their appearance. They should only be cleaned with warm soapy water and then wiped with a dry cloth. Under no circumstances should any aggressive or abrasive cleaning agent be used, as this can lead to a deterioration of the high quality finish.